

Zone

| Zone | | |
|-----------------|---|---|
| Sections | Setting View | Item |
| 001 – 064 | (-----)(0) (if Section Number Bigger Than 8) | 1. Serial Number 2. Board Input Number |
| | (00)(0) (***) | 1. Zone Definition 2. Area Op1. Auto Zone Shutdown (Arm Only on Key Switch) Op2. Bypassable Zone (Disarm Only on Key Switch) Op3. Force Zone (Force on Key Switch) Op4. Stay Zone (Stay on Key Switch) Op5. EOL Op6. Normally Open |
| 101 – 164 | (-----) | 1. Label |
| | (000)(0)(0)(***) | 1. Zone Speed 2. Alarm Type 3. Zone Tamper Op1. Double Intelli Op2. Timer Intelli Op3. Cross Intelli |

Output

| Outputs | | |
|-----------------|---|---|
| Sections | Setting View | Item |
| 201 – 216 | (-----)(0) (if Section Number Bigger Than 204) | 1. Serial Number 2. Board Output Number |
| | (00)(00)(000)(00:00) | 1. Activation Event Group 2. Activation Event Subgroup 3. Activation Delay 4. Activation Time |
| 217 – 232 | (00)(00)(000)(00:00) | 1. De-Activation Event Group 2. De-Activation Event Subgroup 3. De-Activation Delay 4. De-Activation Time |
| 251 – 266 | (0)(***) | 1. Area Op1. Delay Mode (Sec/ Min) Op2. Pulse Mode Op3. Normally State (Open/ Close) Op4. Active by Remote Access Op5. De-Active by Remote Access Op6. Active on Time |

| | | |
|-----------|-------|------------------------------------|
| | | Op7. De-Active on Time Op8. N/A |
| 271 - 286 | ----- | 1. Label |

Delay

| Delay | | |
|-----------|--------------|-------------------------------|
| Sections | Setting View | Item |
| 301 – 304 | (000) | 1. Entry Delay 1 |
| 305 – 308 | (000) | 1. Entry Delay 2 |
| 311 – 314 | (000) | 1. Exit Delay |
| 315 – 318 | (000) | 1. Special Arm Exit Delay |
| 321 - 324 | (000) | 1. Bell Cut Off |
| 330 | (000) | 1. Hold-Up Zone Delay |
| 331 – 334 | (000) | 1. Intelli Delay |
| 335 – 338 | (00) | 1. Auto Zone Shutdown Counter |
| 339 | (000) | 1. Access Lock Delay |
| 340 | (000) | 1. Access Lock Counter |
| 341 – 344 | (00:00) | 1. Auto Arm Time |
| 351 – 354 | (00:00) | 1. Auto Disarm Time |
| 361 – 364 | (000) | 1. No Movement Timer |

Area

| Area | | |
|-----------|--------------|--|
| Sections | Setting View | Item |
| 400 | (****) | Op1. Area 1 Activation Op2. Area 2 Activation Op3. Area 3 Activation Op4. Area 4 Activation |
| 401 – 404 | (*****) | Op1. Auto Arm on Time Op2. Auto Arm on No-Movement Op3. Auto Arm Stay Op4. Bell Squawk on Remote Op5. Bell Squawk on Keypad Op6. No Exit Delay with Remote Op7. Auto Force Arm Op8. Beep on Exit/ Entry Delay |
| 405 | (****) | Op1. Area 1 Extended Exit Delay Op2. Area 2 Extended Exit Delay Op3. Area 3 Extended Exit Delay Op4. Area 4 Extended Exit Delay |
| 410 | (*****) | Op1. Quick Full Arm Area 1 Op2. Quick Full Arm Area 2 Op3. Quick Full Arm Area 3 Op4. Quick Full Arm Area 4 Op5. Quick Stay Arm Area 1 |

| | | |
|-----------|--------------|--|
| | | Op6. Quick Stay Arm Area 2 Op7. Quick Stay Arm Area 3 Op8. Quick Stay Arm Area 4 |
| 411 | (****) | Op1. Quick Force Arm Area 1 Op2. Quick Force Arm Area 2 Op3. Quick Force Arm Area 3 Op4. Quick Force Arm Area 4 |
| 416 – 419 | (000)(*****) | 1. Auto Disarm Area Op1. Disarm on Monday Op2. Disarm on Tuesday Op3. Disarm on Wednesday Op4. Disarm on Thursday Op5. Disarm on Friday Op6. Disarm on Saturday Op7. Disarm on Sunday Op8. N/A |
| 421 – 424 | ----- | 1. Label |

General Options

| System | | |
|---------|--------------|--|
| Section | Setting View | Item |
| 430 | (*****) | Op1. Trouble Latch Op2. Audible Trouble Warning Op3. Arm Inhibit on Trouble Op4. Daylight Saving Time Op5. Send SMS/Call if Keypad Lock Op6. Zone EOL Op7. Bell Squawk/ Send SMS When Installer in Op8. Jalali Time |
| 431 | (0)(0)(0) | 1. Zone Tamper 2. Bus Module Tamper 3. Main Tamper |
| 432 | (0)(0)(0) | 1. Panic 1 2. Panic 2 3. Panic 3 |

Reporting Settings

| Monitoring Center Reporting (Maha) | | |
|------------------------------------|--------------|---|
| Section | Setting View | Item |
| 500 | (0)(0) | 1. TLM Options 2. GSM/ GPRS No Service Trouble |
| 501 | ----- | 1. Telephone Number 1 |
| 502 | ----- | 1. Backup Telephone Number |

| | | |
|-----------|---------------|---|
| 510 | (*****) | Op1. Reporting (ON/ OFF) Op2. Account Number 1 Force to All Areas Op3 – Op7. N/A |
| 511 - 514 | (---- | 1. Area x Account Number |
| 520 | (0)(0)(0)(0) | 1. Tel Reporting Priority 2. GPRS Reporting Priority 3. SMS Reporting Priority 4. GSM Reporting Priority |
| 521 | (000) Seconds | 1. Reporting Delay (ademco, call, sms, gprs, ...) |
| 522 | (000) | 1. Maximum Reporting Attempts (call, sms, gprs, ...) |
| 523 | (000) | 1. Delay Between Attempts (call, sms, gprs, ...) |
| 524 | (000) Minutes | 1. Send Test Report When Arm |
| 525 | (000) Minutes | 1. Send Test Report When Disarm |
| 526 | (0) | 1. Number of Rings |
| 527 | (0) | 1. Voice Repeat |
| 530 | ----- | IP/ Domain 1 |
| 531 | (00000) | Port 1 |
| 532 | ----- | Backup IP/ Domain |
| 533 | (00000) | Backup Port |
| 534 | ----- | Encryption Key 1 |
| 535 | ----- | Backup Encryption Key |
| 536 | ----- | SMS Center 1 |
| 537 | ----- | Backup SMS Center |
| 538 | (000)(*) | 1. GSM No Service Timer Op1. Update date and time by GSM |

| Local/ Cloud Reporting | | |
|-------------------------------|---------------------|---|
| Section | Setting View | Item |
| 540 | (*)(0) | Op1. Enable 1. Communication Trouble Feedback |
| 541 | ----- | Local Server Username |
| 542 | ----- | Local Server Password |
| 543 | ----- | IP/Domain 1 |
| 544 | (00000) | Port 1 |
| 545 | ----- | Backup IP/Domain |
| 546 | (00000) | Backup Port |
| 547 | ----- | SMS Center 1 |
| 548 | ----- | Backup SMS Center |
| 549 (Secretary) | (*****) | Op1. Active/ De-Active Op2. Full Arm Access Op3. Stay Arm Access Op4. Disarm Access Op5. Bypass Access Op6. PGM Activation Access Op7. PGM De-Activation Access |

| | | |
|--|--|-------------|
| | | Op8. Status |
|--|--|-------------|

User

| Users (System Master + 32 User) | | |
|---------------------------------|--------------------|--|
| Sections | Setting View | Item |
| 600 | (*****) | Op1. Code Length (Off = 4 digit) Op2. Admin Can See Other User Codes Op3. Any Phone Number Accept Op4. User Message Reporting Op5 – Op8. N/A |
| 601 - 632 | (****)(0) | Op1. Area 1 Access Op2. Area 2 Access Op3. Area 3 Access Op4. Area 4 Access 1. Access Level |
| 633 - 664 | (*****) | Op1. Force Access Op2. Bypass Access Op3. Stay Arm Access Op4. Remote Access (Call/ SMS) Op5. Arm Only Op6. Output Access Only Op7. Duress Op8. N/A |
| 701 – 732 | ----- | 1. Remote ID |
| 740 (All Users) | (0-00)(0-00)(0-00) | (0-00): Button 1 – 12 Actions |
| 741 – 772 | (0-00)(0-00)(0-00) | 0: Action Group |
| | (0-00)(0-00)(0-00) | 00: Action Subgroup |

Installer

| Installer | | |
|-----------|------------------|---|
| Section | Setting View | Item |
| 900 | ---- or ----- | 1. Pass Code |
| 901 | ----- | 1. Phone Number |
| 902 | No (C) / Yes (E) | 1. Reset System Master Code |
| 903 | No (C) / Yes (E) | 1. Delete All Users |
| 904 | No (C) / Yes (E) | 1. Reset All Label |
| 905 | No (C) / Yes (E) | 1. Reset Factory |
| 906 | (000) | 1. Hardware Reset Factory Lock (0: De-Active, 357: Active) |
| 907 | ---- or ----- | 1. Software Password |
| 908 | ----- | 1. Label |

System Info

| Info | | |
|---------|-----------------|--|
| Section | Setting View | Item |
| 995 | ----- | 1. System Firmware Version |
| 996 | ----- | 1. System Serial Number |
| 997 | (0)(00)(00)(00) | 1. System Active Area 2. System Active User 3. System Defined User 4. System Assigned Remote Controller |

Module

| Module Option | | |
|---------------|---|--------------------|
| Sections | Setting View | Item |
| 990 | Keypad: (****)(*)(-----) | Op1. Area 1 Access |
| | | Op2. Area 2 Access |
| | Op3. Area 3 Access | |
| | Op4. Area 4 Access | |
| 991 | Input/ Output/ GSM/ Ethernet: (*)(-----) | Op5. Tamper |
| | | 1. Label |
| | | Op1. Tamper |
| 991 | (0) | 1. Label |
| 991 | (0) | 1. Delete Module |